

# VL Information Guide

## External Accessories

Description		Catalog Number
<b>Miscellaneous</b>		
DG, FG	Mounting Screw Kit, 2 screws	<b>MSKF2</b>
FG, FG	Mounting Screw Kit, 4 screws	<b>MSKF4</b>
JG, LG	Mounting Screw Kit, 4 screws	<b>MSKL4</b>
MG	Mounting Screw Kit, 4 screws	<b>MSKM4</b>
NG, PG	Mounting Screw Kit, 4 screws	<b>MSKP4</b>
DG, FG	Trip Unit Adjustment Sealing Cover for Thermal Magnetic Model 525	<b>TSCFTM</b>
JG, LG	Trip Unit Adjustment Sealing Cover for Thermal Magnetic Model 525	<b>TSCLTM</b>
MG	Trip Unit Adjustment Sealing Cover for Thermal Magnetic Model 525	<b>TSCMTM</b>
DG, FG, JG, LG	Replacement Trip Adjustment Sealing Cover, for Electronic Units Model 545 and 576	<b>TSCMET</b>
NG, PG	Replacement Trip Adjustment Sealing Cover, for Electronic Units Model 545 and 577	<b>TSCPET</b>
LG	Handle Extension	<b>THEL</b>
MG	Handle Extension	<b>THEM</b>
PG	Handle Extension	<b>THEP</b>
<b>Ground Return Sensor</b>		
$I_n$ (A)		
60	Pass thru Trip Neutral phase Ground Return Sensor, for DG frame	<b>NGSD060</b>
100	Pass thru Trip Neutral phase Ground Return Sensor, for DG and FG frames	<b>NGSF100</b>
150	Pass thru Trip Neutral phase Ground Return Sensor, for FG and JG frames	<b>NGSF150</b>
250	Pass thru Trip Neutral phase Ground Return Sensor, for DG and FG frames	<b>NGSJ250</b>
400	Pass thru Trip Neutral phase Ground Return Sensor, for JG and LG frames	<b>NGSL400</b>
600	Pass thru Trip Neutral phase Ground Return Sensor, for LG and MG frames	<b>NGSM600</b>
800	Pass thru Trip Neutral phase Ground Return Sensor, for MG and NG frames	<b>NGSN800</b>
1200	Pass thru Trip Neutral phase Ground Return Sensor, for NG and PG frames	<b>NGSP120</b>
1600	Pass thru Trip Neutral phase Ground Return Sensor, for PG frame	<b>NGSP160</b>