


General duty 600 amp

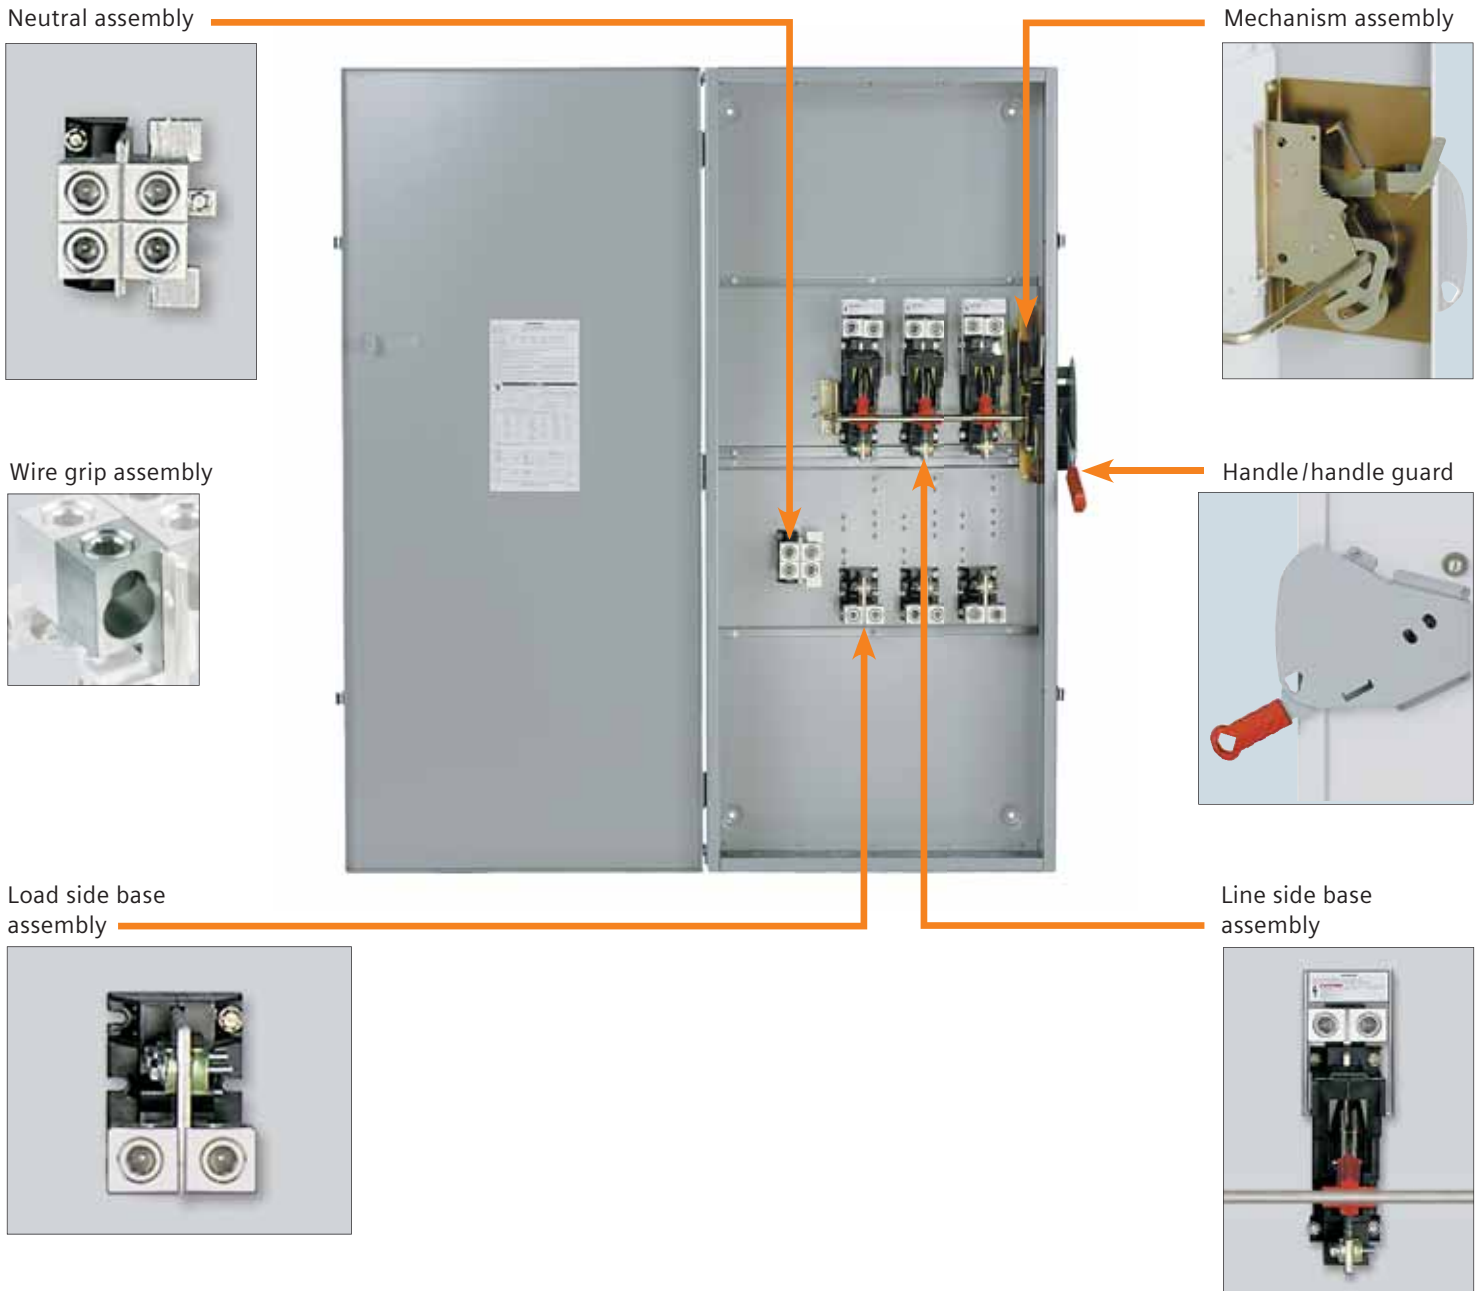

Switch catalog number		Line base assembly ^{1) 2) 3)}	Load base assembly ^{1) 2) 3)}	Handle / handle guard	Mechanism assembly	Wire grips assembly ¹⁾	Neutral assembly
Type 1	Type 3R						
Fusible							
GF226N	GF266NR	HFB66	HBB656	HH65678	HM66	HL65678	HN656
GF226NH	GF226NRH						
GF326N	GF326NR						
GF326NH	GF326NRH						
Non-Fusible							
GNF326	—	HNB66	—	HH65678	HM66	HL65678	HN656

1) One wire grip per kit (Two wire grips needed for each line pole and each load pole).
 2) Wire grips are not provided on line and load base assemblies.
 3) Each line and load base assembly contains one pole.

Heavy duty 600 – 1200 amp (600A shown)



Switch catalog number				Line base assembly 1) 2)	Load base assembly 1) 2)	Handle / handle guard	Mechanism assembly	Wire grips assembly 3)	Neutral assembly
Type 1	Type 3R	Type 4/4X	Type 12						
600 Amp									
HF226N	HF226NR	HF266S ⁴⁾	HF266J	HFB66	HBB656	HH65678 ⁴⁾	HM66	HL65678	HN656
HF226NH	HF226NRH	HF326S ⁴⁾	HF326J						
HF266	HF266R	HF366S ⁴⁾	HF366J						
HF326N	HF366NR	—	HF366JW						
HF326NH	HF326NRH	—	—						
HF366	HF366R	—	—						
HF366H	HF366RH	—	—						
HF366N	HF366NR	—	—						
HNF266	HNF266R	HNF266S ⁴⁾	HNF266J	HNB66	—				
HNF366	HNF366R	HNF366S ⁴⁾	HNF366J						
800 Amp									
HF227N	HF227NR	HF327S ⁴⁾	HF327J	HFB67A	HBB67A	HH65678 ⁴⁾	HM67A	6)	HN678
HF327N	HF327NR	HF367S ⁴⁾	HF367J						
HF367	HF367R	—	—						
H367N	HF367NR	—	—						
HNF367	HNF367R	HNF367S ⁴⁾	HNF367J	HNB67A	—				
1200 Amp									
HF228N	HF228NR	—	—	HFB68	HBB68	HH68 ⁴⁾	HM678	6)	HN678
HF328N	HF328NR	—	—						
HF368	HF368R	HF368S ⁴⁾	HF368J						
HF368N	HF368NR	—	—						
HNF368	HNF368R	HNF368S ⁴⁾	HNF368J	HNB678	—				

1) Wire grips are not provided on 600A line and load base assembly.
 2) Each line and load base assembly contains one pole.
 3) One wire grip per kit (two wire grips needed for each 600A line pole and each 600A load pole).
 4) For Type 4/4X switches, place an "S" on the end of the catalog number for the replacement handle i.e: HH65678 becomes HH65678S.
 5) Note: For a replacement door, place "DOOR" at the end of the switch catalog number. i.e: HF226NDOOR.
 6) Wire grips are included on 800 and 1200A line and load bases.